

## Software update instruction for X-522 v1.6A\_v1.46M

### Change notes for SW v1.6 (A)pp[MPEG] v1.46 (M)cu:

**Attention:** the version information can be found at SETTINGS > SYSTEM. Please only install higher versions to the system. For APP the MPEG version info must be compared, for MCU the MCU version must be checked.


- (A) The HOME / MAIN menu features a CAMERA icon, to manually invoke the camera video input.
- (B) Minor text corrections applied for several system languages.
- (C) **[optional]** This SW supports the X-522-CPW dongle sold separately. The dongle provides wireless CarPlay function.

### Step 1 Download of SW and preparation of a USB flash drive for the update process:

Download the self-extracting update file from the XZENT homepage.

Copy the self-extracting file to an USB flash drive (≤8GB).

**Attention: in some rare cases, the USB-flash-drive may not be detected by the X-522 device. If one step fails, please re-check and re-use a different brand/manufacturer for the USB flash drive and/or change the memory size (<1GB, 2GB, 4GB ...).**

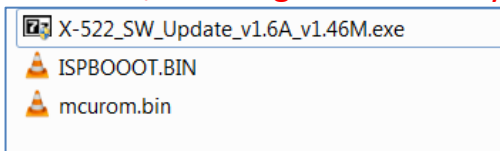


If you double click the self-extracting file, 2 additional files are added to the USB-flash-drive ISPBOOT.BIN and mcutom.bin.

### Step 2, APP(MPEG):

Duration of APP update is approx. 5 min. (without preparation time).

- a) Please connect the USB flash drive from step 1 to the front USB port of the device. The XZENT device may first try to start playing a media file. You can cancel the media start and enter SETTINGS > System via HOME/Main menu.
- b) Select „MPEG Update“ from the 2nd page of the System page.
  - a. The XZENT device now checks if the ISPBOOT.BIN file is present – if not, the device will prompt an error. For error cases check and restart with step 1.
- c) If the correct file is detected, the screen will fade out to a white screen (which is normal) for approximately ~5 to 10 sec. (**NOTE:** fading out to white is expected behaviour).
  - a. After the screen gets WHITE, the device should start the MPEG Update by showing a screen with a progress bar (see screenshot below). While progress bar is displayed DO NOT interrupt the device or remove the USB drive. Also don't power off the device. When progress hits 100%, a success message with a smiley ☺ is shown. You can safely unplug the flash drive and restart the device via ACC or the reset pin (above front USB port). If the screen stays permanently white, follow the suggestion under (b).

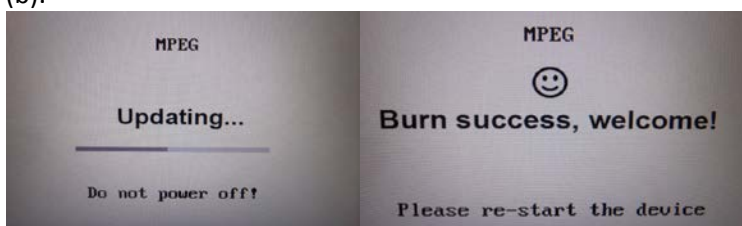

## Software update instruction for X-522 v1.6A\_v1.46M

- b. **NOTE:** if the screen remains white for longer than 30 sec. e.g. white without text and progress bar, you can remove the USB-flash-drive and restart the device via ACC/ignition OFF or via the reset pin (above front USB port). Please jump back to step 1 and use a different USB-flash-drive brand/manufacturer/size.

### Step 3, MCU:

Duration of MCU update approx. 3 min. (without preparation time).

- a) After restart of the device in step 2, re-connect the USB-flash-drive from step 1 at the front USB port if it was removed before. The device might try to start auto play of a media file again. Ignore and enter SETTINGS > SYSTEM via HOME/Main menu.
- b) Select „MCU Update“ at the 1st page of System UI and confirm the prompted question with OK.
  - a. The XZENT device now checks for the MCUROM.BIN file – if not present device will prompt an error message – please jump to step 1.
- c) If the correct file is detected and loaded, display screen will change to the black MCU update screen showing a progress bar. While the progress bar is shown, do not remove the USB flash drive and do not power OFF the device.
- d) Once the progress bar has reached 100% the device will restart automatically.

### Step 4, verify correct Version:

- a) After the device restart on step 3, go to SETTINGS > SYSTEM and check installed versions:
  - a. MCU Version = HM4Z05-MCU-055B-V1.46
  - b. APP(MPEG) Version = HM4Z05-MPEG-055B-V1.6
- b) If the versions are correct, remove the USB flash drive.